

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

 
SEAT COVERS
BY

fia

FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

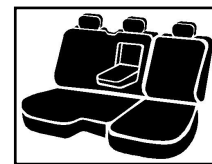

INSTALLATION INSTRUCTIONS
FOR

NP92-49/ Oe32-49/ SL62-49/ SP82-49/ TR42-49/ TRS42-49

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVER – 60 PORTION:

- 1) Remove head rest (see note)
- 2) Slip cover over backrest. Ensure cover is installed under seat belt
Holding cushion up in $\frac{3}{4}$ position allows for better access
- 3) Pass straps behind the seat straight down
- 4) Smooth cover tightly from top to bottom
- 5) Install adhesive back velcro (included) on inside edge of armrest well to align with velcro on seat cover. **NOTE: BEFORE SECURING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED.**
- 6) Hold cushion up in $\frac{3}{4}$ position, tuck bottom of cover through crevice under backrest
- 7) With cushion up, locate straps and secure to buckles on seat cover
- 8) Locate bottom right flap through crevice and hold at back of seat. With other hand bring the side flap around and attach (see note)
- 9) Repeat on left side
- 10) Adjust all straps, buckles and velcro

B) BACKREST COVER – 40 PORTION:

- 1) Repeat steps 1 – 4 from A) above
- 2) Repeat steps 6 – 10 from A) above

C) CUSHION COVER – 60 PORTION AND 40 PORTION:

 
- 1) Center cover on the seat
- 2) Tuck back flap through crevice
- 3) Lift seat and pass straps under seat and buckle
- 4) Pass side straps and buckle
- 5) Adjust straps and buckles to equalize tension

D) ARMREST COVER

- 1) Fold down armrest
- 2) Slip cover over armrest and attach velcro
- 3) Material can be tucked in between cup holder and armrest for a better look.

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

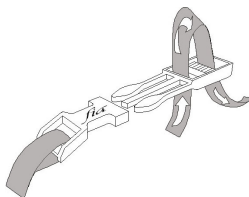


2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

 (If unable to remove consult dealership)

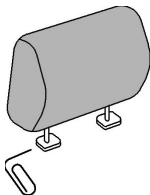


3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

4) HEADREST COVERS

Some models may contain more than one set of headrest covers. Select the ones that fit your headrests best.

 5) BACKREST COVER BOTTOM FLAP INSTALLATION

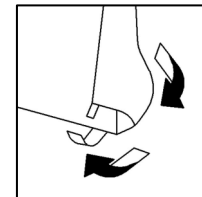

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

fia

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com