 


If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY

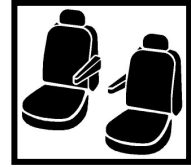

FEATURING

SUPER-GRIP[®]

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS

FOR

NP92-72/ OE32-72/ SL62-72/ SP82-72/ TR42-72/ TRS42-72

Backrest Cover:

 
1. slip cover over backrest
2. align latch opening on cover to latch on backrest
3. smooth cover tightly from top to bottom
4. fold backrest down to most flat position
5. attach velcro at back of cover to bottom flap of seat cover
6. return backrest to up position

Cushion Cover:

1. center cover on cushion
2. tuck the back part of the cushion cover through the seat crevice
3. pass the front straps under the seat
4. move seat to fold and tumble position
5. buckle straps to cover
6. attach side velcro under cushion
7. adjust all velcro, straps/buckles to equalize the tension for a uniform fit

NOTES:

1) SELF-LOCKING BUCKLE:

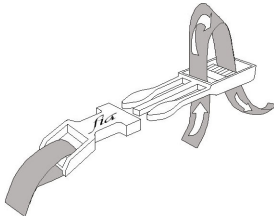

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com