





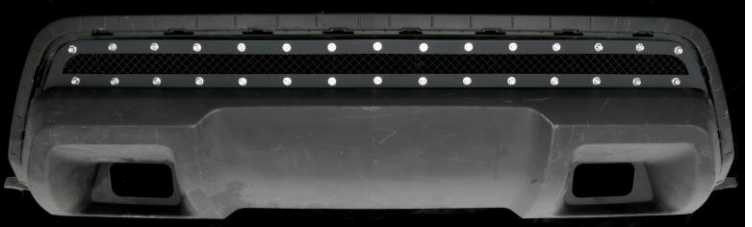
# Grille Installation Instruction

Rev. 181201

Part#	<b>GR03LFC17H</b>	Application	<b>For 2015-2019 Chevy Colorado Not For ZR2 Model</b>
-------	-------------------	-------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	4	K-Lock Nuts	6	
	2	Tabs	2		5	Fully Threaded Studs	6	10-24 1.5"
	3	Tabs	4					

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Remove front bumper according to factory instruction. This will allow access to the rear of bumper grille shell.	
3	Install the fully threaded studs into the backside of the Mesh Grille insert.	
4	Center the grille into the opening of the factory grille shell. Place the powder coated brackets over the fully threaded studs. Be sure the bolts are through the OEM grille shell.	
5	Secure the grille to the vehicle using the k-lock nuts.	
6	Make sure the grille is centered and tighten the fasteners.	
7	Reinstall the front bumper which was removed in step 2.	
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!