





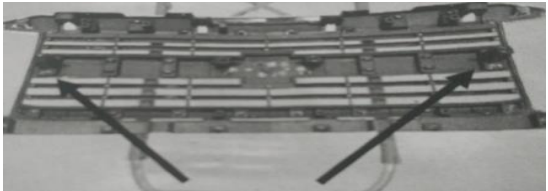

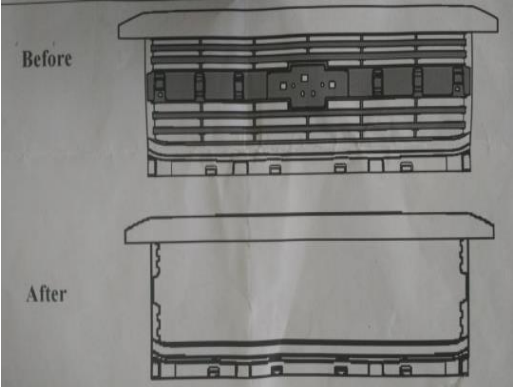
# Grille Installation Instruction

Rev. 190801

Part#	GR03LFC33L	Application	<b>For 2015-2019 Chevy Silverado 2500HD / 3500HD</b>
-------	------------	-------------	------------------------------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Rivet Grille	1	Stainless steel	3	Lock Nuts	8	1/4 " -20
2	Bolt	8	1/4 " -20×1 1/2 "	4	Washer	16	1/4 "	

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	N/A
2	You may need to remove the black plastic cover (at the bottom of OEM front bumper) from vehicle. This will allow access to the rear of the grille shell.	
3	Remove plastic cover by removing 12 retaining clips with flat head screw driver(locations shown above)	4 
		
5	Remove grille by pulling grille forward away from the truck	6 
		
7	Use saw to cut inner section of grille out(shaded area below)	8 Secure grille using the flat tabs and lock nuts from the back side of the OEM grille shell.
		9 Make sure the grille is centered and tighten the fasteners.
		10 Installation completed!!!
		

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!