


HUSKY **WeatherBEATER™** **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS


Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Hyundai Santa Fe 6-passenger & 7-passenger models. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR HYUNDAI SANTA FE FRONT FLOOR LINERS (6-PASSENGER/7-PASSENGER MODEL)

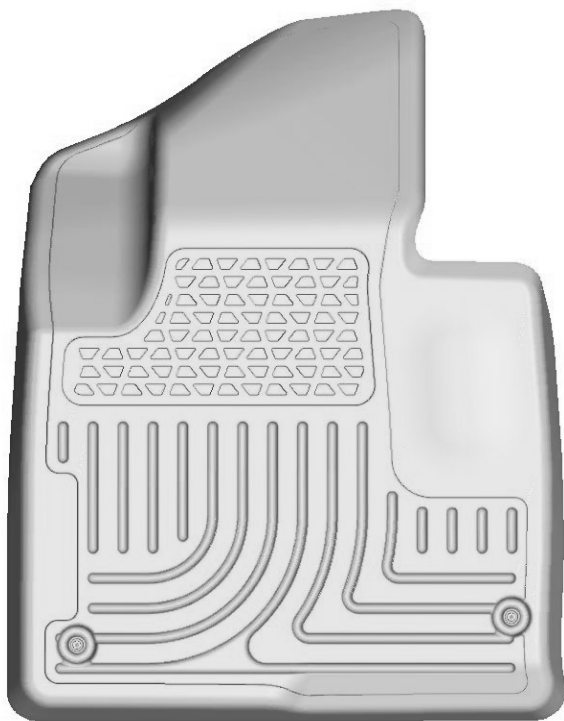

LEFT OR DRIVER'S SIDE

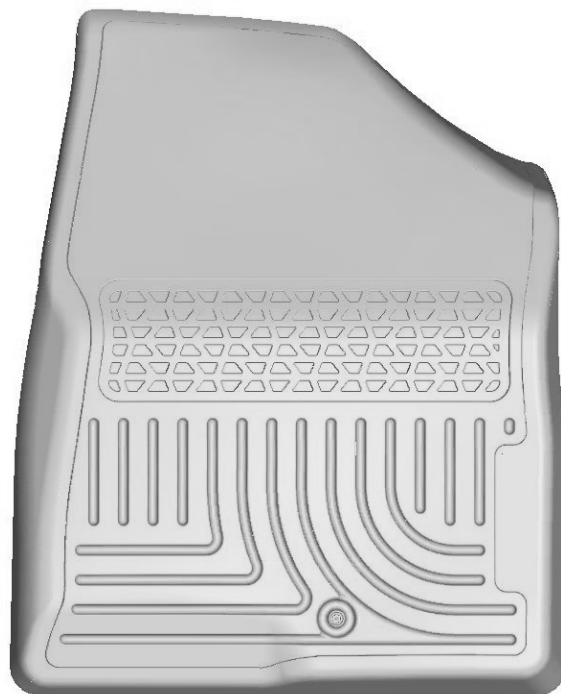

RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR NEW SANTA FE FRONT FLOOR LINERS, FIRST SLIDE BOTH FRONT ROW SEATS ALL THE WAY BACK SO AS TO EXPOSE THE MAXIMUM AMOUNT OF THE FLOOR PAN. AS YOU INSTALL THE LINERS, NOTE THAT BOTH LINERS ARE DESIGNED TO ATTACH TO THE FACTORY MAT RETAINING HOOKS. BEFORE OPERATING YOUR VEHICLE, MAKE SURE THE LINER IS SECURELY POSITIONED ON THE FACTORY MAT HOOKS. ONCE LINERS ARE SECURELY IN PLACE, REPOSITION THE FRONT SEATS AS DESIRED.