


BEFORE INSTALLATION: Trial fit the Wind Tamer to vehicle to insure you have the correct size. There should be a 1 inch gap between the sunroof opening gasket and the Wind Tamer on both sides. (Fig 1)


- 1 Wash and dry roof. Then wipe the area where the adhesive strip will contact the roof with the alcohol pad provided. Allow the alcohol to dry completely.
- 2 Peel the red backing off the two small pieces of adhesive strip at the left and right side of the Wind Tamer. Peel off 2 inches of adhesive backing from the center adhesive strip. (Fig 2)
- 3 Position the Wind Tamer on the roof so that it is centered left and right on the sunroof opening and the adhesive strip is flush with the front edge of the sunroof gasket (Fig 3)
- 4 Press down on the left and right side to adhere the two smaller pieces of adhesive to the roof, then secure center strip starting with the exposed section of adhesive peeling away the backing as you go. (Fig 4)

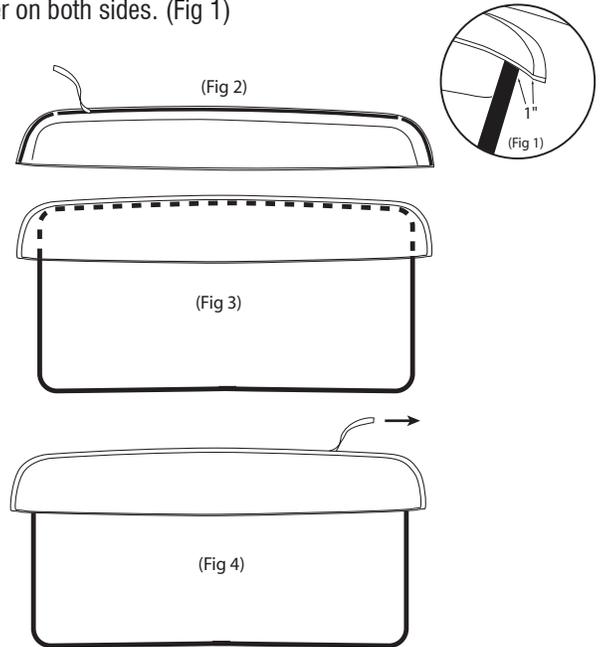

Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219

BEFORE INSTALLATION: Trial fit the Wind Tamer to vehicle to insure you have the correct size. There should be a 1 inch gap between the sunroof opening gasket and the Wind Tamer on both sides. (Fig 1)

- 1 Wash and dry roof. Then wipe the area where the adhesive strip will contact the roof with the alcohol pad provided. Allow the alcohol to dry completely.
- 2 Peel the red backing off the two small pieces of adhesive strip at the left and right side of the Wind Tamer. Peel off 2 inches of adhesive backing from the center adhesive strip. (Fig 2)
- 3 Position the Wind Tamer on the roof so that it is centered left and right on the sunroof opening and the adhesive strip is flush with the front edge of the sunroof gasket (Fig 3)
- 4 Press down on the left and right side to adhere the two smaller pieces of adhesive to the roof, then secure center strip starting with the exposed section of adhesive peeling away the backing as you go. (Fig 4)

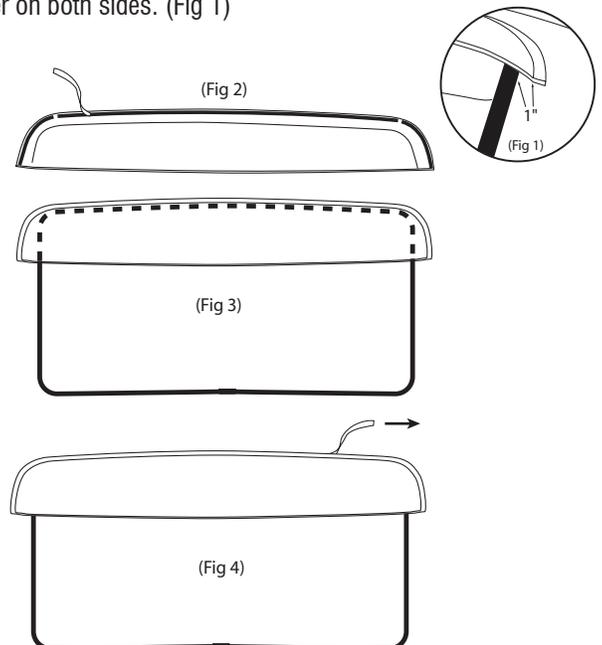

Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219