



Recommended Air Filter Cleaning Intervals: 3000 Miles.

Part # 's **Secret Weapon : 301-116**

US Patent# US 7,263,961B2

Application : **1991-95 Acura Legend / 96-98 Acura TL V6 Without TCCS**

Part # 's **Secret Weapon : 301-117**

Application : **1991-95 Acura Legend / 96-98 Acura TL V6 With TCCS**



Parts List : 1 x Weapon*R Intake pipe. / 1 x Weapon*R Air Filter / 1 x 10mm x 12" Hose / 1 x 15mm x 6" Hose
1 x 4mm x 6" Hose / 1 x 3"- 3" Coupler / 1 x Intake System Bracket kit / 1 x 3" Clamp

Note : **Note: Additional Parts needed when you have a Dragon Filter, 1 x 3"-3" Coupler / 2 x 3" Clamp**

- 1 Remove bolts securing OEM air cleaner box, loosen clamps on OEM rubber intake pipe.
- 2 Remove the coolant transfer / PCV hardline from OEM intake and engine.
- 3 Mark the coolant transfer hose origins, install the 10mm hose supplied in kit to those 2 locations.
- 4 Remove the 4mm OEM vacuum hose from intake manifold and OEM intake pipe.
- 5 Remove the OEM rubber intake tube, remove the OEM air cleaner box by pulling upwards.
- 6 Wipe the throttlebody clean of any grease or dirt, install the 3" coupler onto throttlebody, secure with OEM clamp.
- 7 Insert the intake pipe into 3" coupler on throttlebody, secure with supplied clamp.
- 8 Replace the PVC & Vacuum hoses with supplied hoses in kit, install from OEM ports to intake pipe.
- 9 Install the hoses from their point of origin and onto the Weapon *R intake pipe.
- 10 Install the Weapon*R Hyper filter onto the end of the intake pipe.
Note: Dragon / Secret Weapon Filter Option : Disregard installation on Hyper filter.
- 11 Install 3" coupler onto Dragon or Secret Weapon air filter, secure with supplied clamp.
- 12 Install filter assembly onto the end of Weapon*R intake pipe, secure with OEM clamp.
- 13 Install U-shaped part of intake system bracket under the clamp on air filter.
- 14 Install the rubber mounting grommet to the closest hole to the Weapon*R air filter.
- 15 Bend the straight portion of the intake system bracket to the Rubber mounting grommet.
- 16 Secure with washer and nut included in bracket kit.
- 17 Position air intake pipe for clearance, making sure no parts are touching any part of the vehicle.
- 18 Check for hood clearance, re-adjust intake tube for perfect fitment and clearances.
- 19 Place Weapon*R CARB Sticker on a visible place in engine compartment. (If Applicable)

WARNING: EO# LABEL IS REQUIRED TO AID IN THE PASSING THE SMOG CHECK INSPECTION.

Note: Returned Products may be subject to a 25% restocking charge. **INSTALLED PRODUCTS ARE NON-REFUNDABLE !**
Report any defective or missing parts to the authorized Weapon*R dealer you purchased this product from.
Installation does require some mechanic

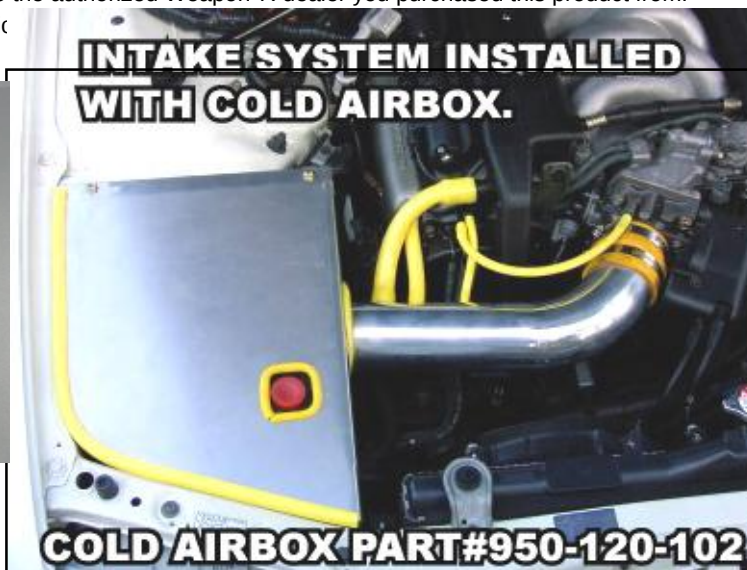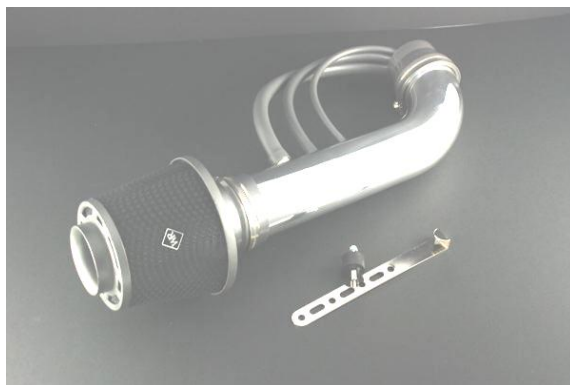

Cold air box Available for the Legend only!

Adjustable Fuel Pressure regulator Kit available for this vehicle.

**If you have any Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM
Email your installed pictures of your WR product for a chance to receive a free gift.**