



**CARB PENDING**

Part # 's **Secret Weapon: 306-112**

Recommended Air Filter Cleaning Intervals: 3000 Miles.

US Patent# US 7,263,961B2

Application : **1999 Subaru Forester 2.5L / Impreza 2.2L & 2.5L / 2.2L & 2.5L Legacy**

note: some pre 99 models may be equipped with 98 engine application, contact our tech for pipe exchange if needed.

**Parts List :** 1 x Weapon\*R Intake pipe. / 1 x Weapon\*R Air Filter / 2 x 10mm x 24" Hose / 1 x 2.75" coupler  
1 x 2.5"- 3" Coupler / 1 x 3"-3" Coupler / 1 x Intake System Bracket kit / 5 x 3" Clamp / 1 x AFM subaru Adapter plate


- 1 Remove bolts securing OEM air cleaner box, loosen clamps on OEM rubber intake pipe.
  - 2 Remove the PCV hoses from OEM intake and engine.
  - 3 Unplug and remove the MAF sensor from the air intake system.
  - 4 Remove the OEM rubber intake tube, remove the OEM air cleaner box by pulling upwards.
  - 5 Wipe the throttlebody clean of any grease, install the 2.75" coupler onto throttlebody, secure with OEM clamp.
  - 6 Insert Weapon\*R intake pipe into the 2.75" coupler, secure with clamp.
  - 7 Measure from valve cover PCV ports to Tee fitting, and from Tee fitting to intake pipe. Replace with supplied 10mm hoses.
  - 8 Measure from crankcase PCV port to 10mm port on intake pipe. Replace with supplied 10mm hose.
  - 9 Stretch the 2.5-3" coupler onto end of intake pipe, secure with clamp.
  - 10 Insert MAF into the 2.5-3" coupler, secure with clamp, connect MAF harness.
  - 11 Line up the holes on MAF to the AFM subaru adapter plate, secure with nuts and bolts in kit.
  - 12 Install the Weapon\*R Hyper filter onto AFM adapter plate..
- Note: If your vehicle has a extra 15mm port you need 306-111-101 1990-98 Subaru**  
**Note: Secret Weapon Filter Option : Disregard installation on Hyper filter.**
- 13 Install 3" coupler onto Dragon or Secret Weapon air filter, secure with supplied clamp.
  - 14 Install filter assembly onto the AFM adapter plate, secure with OEM clamp.
  - 15 Install U-shaped part of intake system bracket under the clamp on air filter.
  - 16 Install the rubber mounting grommet to the closest hole to the Weapon\*R air filter.
  - 17 Bend the straight portion of the intake system bracket to the Rubber mounting grommet.
  - 18 Secure with washer and nut included in bracket kit.
  - 19 Position air intake pipe for clearance, making sure no parts are touching any part of the vehicle.
  - 20 Check for hood clearance, re-adjust intake tube for perfect fitment and clearances.
  - 21 Place Weapon\*R CARB Sticker on a visible place in engine compartment. ( If Applicable )

**WARNING: EO# LABEL IS REQUIRED TO AID IN THE PASSING THE SMOG CHECK INSPECTION.**

**Note:** Returned Products may be subject to a 25% restocking charge. **INSTALLED PRODUCTS ARE NON-REFUNDABLE !**

Report any defective or missing parts to the authorized Weapon\*R dealer you purchased this product from.

Installation does require some mechanical skills. We recommend a qualified mechanic to install this product.

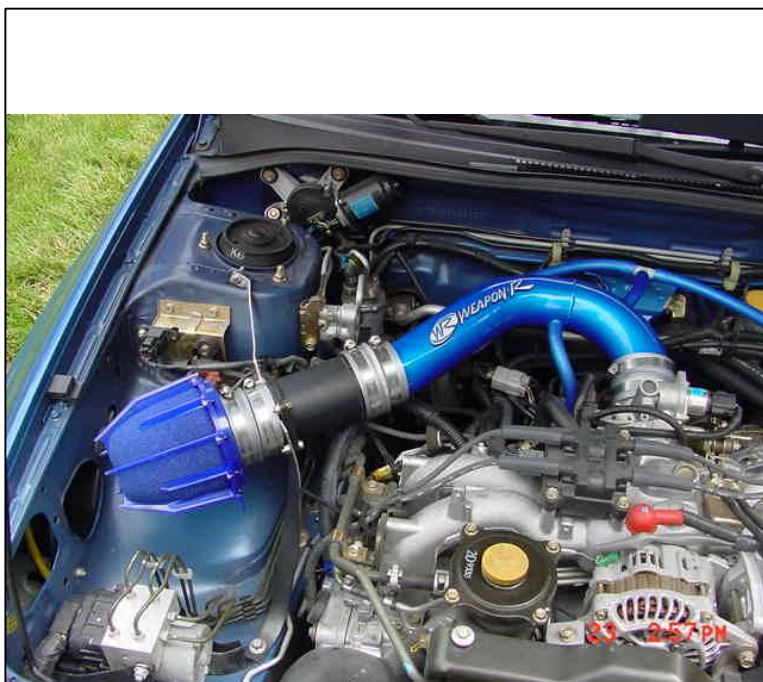

Fuel Pressure regulator kit also available for this vehicle , for more info check our website.