



CARB PENDING

Recommended Air Filter Cleaning Intervals: 3000 Miles.

Part # 's **SECRET WEAPON: / 307-150**

US Patent# US 7,263,961B2

Application : **2001-03 STRATUS V6 2.7L / CHRYSLER SEBRING V6**

Parts List : 1 x Weapon*R Intake pipe. / 1 x Weapon*R Air Filter 3" / 1 x 10mm x 12" Hose
1 x 3"-3.5" Coupler / 1 x 2.5"-3" coupler / 1 x Intake System Bracket kit / 1 x 3" Clamp, 1 x AIT Grommet / 1 x Elbow

Note: Additional Parts needed when you have a Dragon Filter, 2 x 3"-3" Coupler / 2 x 3" Clamps

- 1 Remove bolts securing OEM air cleaner box, loosen clamps on OEM rubber intake pipe.
- 2 Remove PCV hose from OEM intake and engine.
- 3 Unplug AIT sensor from OEM plastic elbow, and remove carefully AIT sensor from elbow. Put aside.
- 4 Remove the OEM rubber intake tube, remove the OEM air cleaner box by pulling upwards.
- 5 Wipe the throttlebody clean of any grease, install the 3.5"-3" coupler onto throttlebody, secure with OEM clamp.
- 6 Install WR Cast elbow into 3" side of coupler and clamp down.
- 7 Insert 3"-3" coupler onto end of WR Cast elbow and clamp down.
- 8 Insert Weapon*R intake pipe into the end of 3" coupler and clamp down.
- 9 Measure the OEM PVC hose, replace with supplied 10mm hose, install from PVC port to intake pipe.
- 10 Reinsert AIT sensor into grommet that is in WR cast elbow. Plug AIT sensor harness into AIT sensor

Note: Secret Weapon Filter Option

- 11 **Install 3"-3" coupler onto end of WR pipe and clamp down, then install WR filter onto end of 3" coupler.**
- 12 Install U-shaped part of intake system bracket under the clamp on air filter.
- 13 Install the rubber mounting grommet to the closest hole to the Weapon*R air filter.
- 14 Bend the straight portion of the intake system bracket to the Rubber mounting grommet.
- 15 Secure with washer and nut included in bracket kit.
- 16 Position air intake pipe for clearance, making sure no parts are touching any part of the vehicle.
- 17 Check for hood clearance, re-adjust intake tube for perfect fitment and clearances.
- 18 Place Weapon*R CARB Sticker on a visible place in engine compartment. (If Applicable)

WARNING: EO# LABEL IS REQUIRED TO AID IN THE PASSING THE SMOG CHECK INSPECTION.


Returned Products may be subject to a 25% restocking charge. **INSTALLED PRODUCTS ARE NON-REFUNDABLE !**

Report any defective or missing parts to the authorized Weapon*R dealer you purchased this product from.

Installation does require some mechanical skills. We recommend a qualified mechanic to install this product.



2003 Dodge Stratus 2.7L V6 SW intake kit as shown.

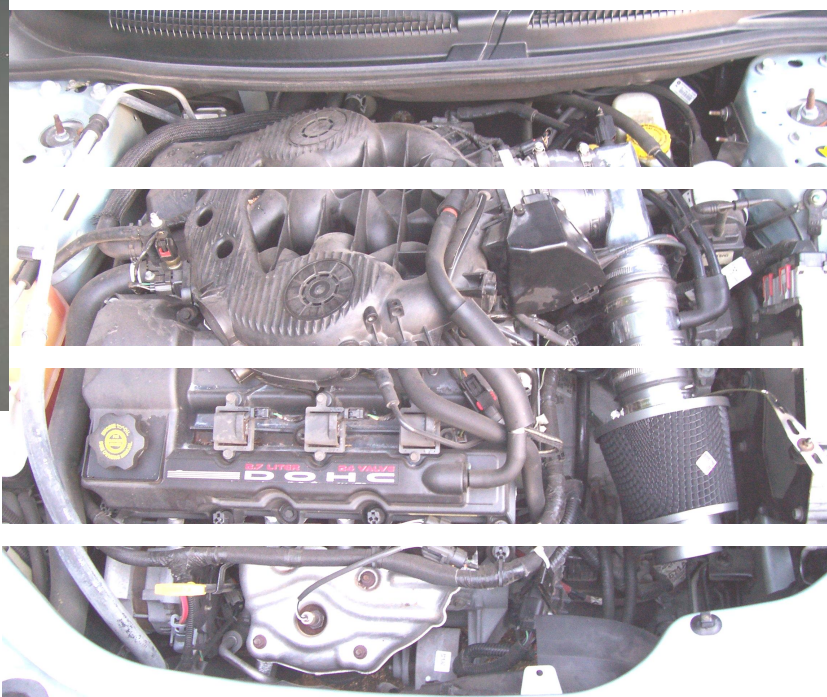

Intercooler Pipe kit also available for this vehicle , for more info check our website.

If you have any Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM