



Recommended filter cleaning interval 3000 miles

Part# **Secret Weapon Intake 307-167**



US Patent# **US 7,263,961B2**

Application: **2005-09 DODGE MAGNUM 3.5L / 2005-09 CHRYSLER 300 3.5L**
2005-09 DODGE CHARGER 3.5L


Page 1 of 2

Parts List: 1 x 4" Weapon*R Air Filter / 1 x Weapon*R Aluminum Air Intake Tube / 1 x 3.5"-4" Silicon Coupler
1 x 3"- 3.5" Silicon Couplers / 1 X 15MM / 4 x Hose Clamps / 1 Heat Shield Kit / 1 x grommet

- 1 Loosen hose clamps securing OEM intake hose. Unplug and remove Air Temp Sensor, put aside for later steps. Remove OEM intake hose.

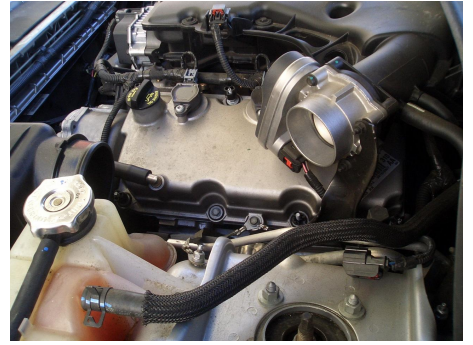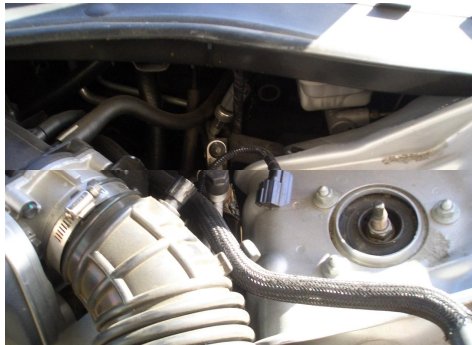

- 2 Remove nut securing OEM air box, save for later steps . Disconnect rubber PCV hose from side of air box. Pull air box upwards to remove.

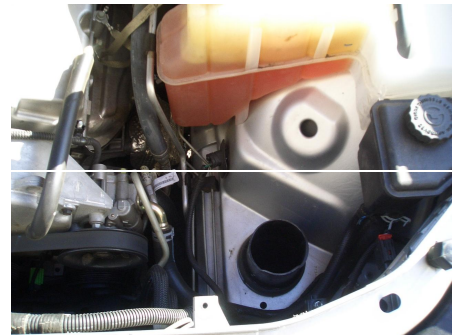

- 3 Insert grommet into hole on Weapon*R intake pipe. Unplug AIT Sensor from harness, and insert sensor into grommet on intake pipe. Stretch 3" side of 3"-3.5" Weapon*R coupler over throttle body and secure with supplied clamp.

- 4 Insert Weapon*R intake pipe into 3.5" side of the coupler on the throttle body, AIT sensor closest to the throttle body.

Secure loosely with supplied clamps. Reconnect wire harness to AIT sensor. Connect OEM PCV hose to Weapon*R intake pipe.

- 5 Place Weapon*R heat shield into place. Secure heat shield with OEM bolt from step 2. Line the circular hole for the intake pipe with split silicone hose included in kit.

- 6 Insert Weapon*R filter into 4" end of 3.5"-4" coupler. Secure with supplied clamp. Attach filter and coupler

assembly to intake pipe, opposite of the end with the

