



Recommended Air Filter Cleaning Intervals: 3000 Miles.

Part # 's Hyper Intake : 901-120 / Dragon Intake : 801-120

Application : 1998-99 Acura CL /98-02 Honda Accord / 1998 Odyssey/ 97-01 Prelude : 4 Cylinder
(1998-2002 ODYSSEY 4CYL AND 97-2001 PRELUDE #D-489-2 ONLY)

ARB # D-489-2 98-2002 ACCORD 4CYL ONLY (The following engine families are excluded from the ARB# SULEV / LEV2 2001 & 2002 1HNXV02.3BF9 & 2HNXV02.3FK6)

Parts List : 1 x Weapon*R Intake pipe. / 1 x Weapon*R Air Filter / 1 x 10mm x 24" Hose

1 x 2.5"- 3" Coupler / 1 x Intake System Bracket kit / 1 x 3" Clamp

Note: Additional Parts needed when you have a Dragon Filter, 1 x 3"-3" Coupler / 2 x 3" Clamp


- 1 Remove bolts securing OEM air cleaner box, loosen clamps on OEM rubber intake pipe.
- 2 Mark the coolant transfer hose origins
- 3 Remove the coolant transfer / PCV hardline from OEM intake and engine. Replace with the 10mm hose supplied in kit to those 2 locations.
- 4 Remove the OEM rubber intake tube, remove the OEM air cleaner box by pulling upwards.
- 5 Wipe the throttlebody clean of any grease, install the 2.5"-3" coupler onto throttlebody, secure with OEM clamp.
- 6 Insert the intake pipe into 2.5"-3" coupler on throttlebody, secure with supplied clamp.
- 7 Install the other end of PVC hose onto the Weapon *R intake pipe.
- 8 Install the Weapon*R Hyper filter onto the end of the intake pipe.
- 9 Note: Dragon / Secret Weapon Filter Option : Disregard installation on Hyper filter.
- 10 Install 3" coupler onto Dragon or Secret Weapon air filter, secure with supplied clamp.
Install filter assembly onto the end of Weapon*R intake pipe, secure with OEM clamp.
- 11 Install U-shaped part of intake system bracket under the clamp on air filter.
- 12 Install the rubber mounting grommet to the closest hole to the Weapon*R air filter.
- 13 Bend the straight portion of the intake system bracket to the Rubber mounting grommet.
- 14 Secure with washer and nut included in bracket kit.
- 15 Position air intake pipe for clearance, making sure no parts are touching any part of the vehicle.
- 16 Check for hood clearance, re-adjust intake tube for perfect fitment and clearances.
- 17 Place Weapon*R CARB Sticker on a visible place in engine compartment. (If Applicable)

BE PASSING THE SMOG CHECK INSPECTION.

charge. **INSTALLED PRODUCTS ARE NON-REFUNDABLE !**

Weapon*R dealer you purchased this product from.

recommend a qualified mechanic to install this product.

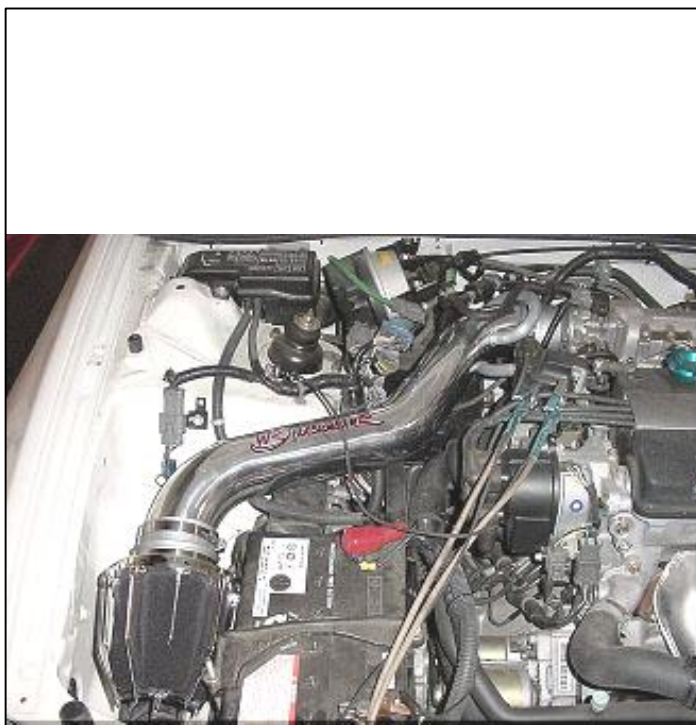

Cold Airbox for 98-01 Prelude and Adjustable Fuel Pressure Regulator Kit available for this vehicle.

If you have any Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM