



Recommended Air Filter Cleaning Intervals: 3000 Miles.

Part #'s **Hyper Intake : 905-123 / Dragon Intake : 805-123**

Application : **2000-05 Lexus IS300 / 2001-04 Lexus GS300**

(2001-2003 GS300 #D-489-2 ONLY) (2000-2003 IS300 #D-489-2 ONLY)

Parts List : **1 x Weapon*R Intake pipe. / 1 x Weapon*R Air Filter 3" / 1 x 10mm x 12" Hose
1 x 3" Coupler / 1 x Intake System Bracket kit / 1 x 3" Clamp / 1 x 15mm x 8" Hose**

Note: Additional Parts needed when you have a Dragon Filter, 1 x 3" Coupler / 2 x 3" Clamps

- 1 Remove bolts securing OEM air cleaner box, loosen clamps on OEM rubber intake pipe.
- 2 Remove PCV & Air Recirculator valve hose from OEM intake and engine.
- 3 Disconnect the MAF sensor harness, carefully remove MAF sensor from OEM airbox,
- 4 Remove the OEM rubber intake tube, remove the OEM air cleaner box by pulling upwards.
- 5 Wipe the throttlebody clean of any grease, install the 3" coupler onto throttlebody, secure with OEM clamp.
- 6 Insert Weapon*R intake pipe into the 3" coupler, secure with clamp.
- 7 Measure the OEM PVC hose, replace with supplied 15mm hose, install from PVC port to intake pipe.
- 8 Install the 10mm hose onto the air recirculator valve and onto the Weapon*R intake pipe.
- 9 Install the Weapon*R Hyper filter onto the end of the intake pipe.
- 10 Install MAF sensor into Weapon*R intake pipe, reconnect MAF sensor harness.

Note: Dragon / Secret Weapon Filter Option : Disregard installation on Hyper filter.


- 11 Install the 3" coupler onto Dragon or Secret Weapon air filter, secure with supplied clamp.
- 12 Install filter assembly onto the end of Weapon*R intake pipe, secure with OEM clamp.
- 13 Install U-shaped part of intake system bracket under the clamp on air filter.
- 14 Install the rubber mounting grommet to the closest hole to the Weapon*R air filter.
- 15 Bend the straight portion of the intake system bracket to the Rubber mounting grommet.
- 16 Secure with washer and nut included in bracket kit.
- 17 Position air intake pipe for clearance, making sure no parts are touching any part of the vehicle.
- 18 Check for hood clearance, re-adjust intake tube for perfect fitment and clearances.
- 19 Place Weapon*R CARB Sticker on a visible place in engine compartment. (If Applicable)

WARNING: EO# LABEL IS REQUIRED TO AID IN THE PASSING THE SMOG CHECK INSPECTION.

Note: Returned Products may be subject to a 25% restocking charge. **INSTALLED PRODUCTS ARE NON-REFUNDABLE !**

Report any defective or missing parts to the authorized Weapon*R dealer you purchased this product from.

Installation does require some mechanical skills. We recommend a qualified mechanic to install this product.

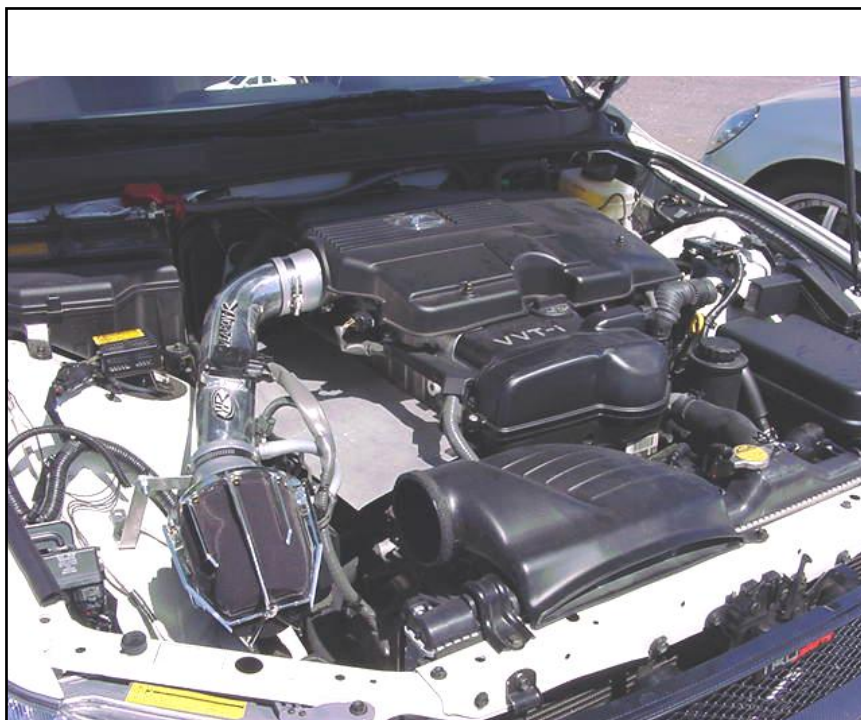

COLD AIRBOX KIT also available for this vehicle , for more info check our website.

If you have any Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM