



## CARB PENDING


Recommended filter cleaning interval every 3000 miles

Part # 's **Secret Weapon Intake : 807-175**

Application : **2006-2007 Chevy HHR**

**Parts List :** 1 x Weapon\*R Intake pipe/ 1 x Weapon\*R 3" Air Filter / 1 X 3"-3" Coupler, 1 x Intake System Bracket kit / 3 x 3" Clamp

- 1 Loosen clamps securing OEM air cleaner tube to throttle body
- 2 Disconnect and remove the PVC hose from OEM intake and engine.
- 3 Lift up on the top Air cleaner assembly
- 4 Disconnect MAF sensor harness from OEM tube
- 5 Remove the OEM rubber intake tube, remove the OEM air cleaner box.
- 6 Remove MAF sensor from Air cleaner set aside
- 7 Reinstall OEM rubber elbow to throttle body and clamp down
- 8 Reinstall PCV hose to OEM tube and clamp back down with OEM clamp
- 9 Install MAF sensor into small WR pipe and secure
- 10 Install small WR pipe into rubber OEM tube and clamp down
- 11 Install 3"-3" coupler onto tube, 3" side to pipe.
- 12 Line up holes on Long WR pipe with frame of vehicle and use OEM grommet locations
- 13 Install Dragon air filter onto the 3" side of coupler, secure with supplied clamp.
- 14 Reconnect MAF wire harness to sensor installed in pipe.
- 15 Position air intake pipe for clearance, making sure no parts are touching any part of the vehicle.
- 16 Check for hood clearance, re-adjust intake tube for perfect fitment and clearances.
- 17 Place Weapon\*R CARB Sticker on a visible place in engine compartment. ( If Applicable )

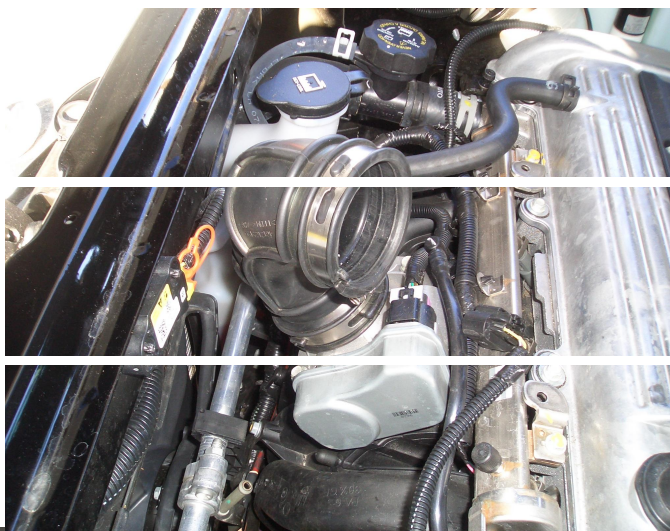

**WARNING: EO# LABEL IS REQUIRED TO AID IN THE PASSING THE SMOG CHECK INSPECTION.**

Returned Products may be subject to a 25% restocking charge. **INSTALLED PRODUCTS ARE NON-REFUNDABLE !**

Report any defective or missing parts to the authorized Weapon\*R dealer you purchased this product from.

**Note:** Installation does require some mechanical skills. We recommend a qualified mechanic to install this product.

**If you have any Question about this Product, Please refer to our website @ [WWW.WEAPON-R.COM](http://WWW.WEAPON-R.COM)**