



**CARB PENDING**

Recommended Air Filter Cleaning Intervals: 3000 Miles.

Part # 's **Hyper Intake : 908-118 / Dragon Intake : 808-118**

Application : **2002-06 Mini Cooper S**

**Parts List : 1 x Weapon\*R Intake pipe. / 1 x Weapon\*R Air Filter / 1 x Stainless Steel Clamp**

**1 x 2.5-3" Coupler / 1 x Weapon\*R Decal / 1 x Intake Bracket kit.**

**Note: Additional Parts needed when you have a Dragon Filter, 1 x 3" Coupler / 2 x 3" Clamps**

- 1 Loosen clips onto of OEM airbox top, Loosen clamp on throttlebody & OEM intake tube.
- 2 Disconnect the 10mm PVC hose on OEM intake pipe. ( Picture 1 )
- 3 Remove the top of the OEM airbox, remove the OEM air filter. ( Picture 2 )
- 4 Place the 2.5"- 3" Coupler onto the throttlebody and clamp down with the OEM clamp.
- 5 Insert the Weapon\*R intake pipe into the coupler on throttlebody.
- 6 Re-install the OEM 10mm PVC hose onto the Weapon\*R intake pipe.
- 7 Attach Weapon\*R Filter to end of Weapon\*R Intake Pipe, clamp down.
- 8 The air filter on the intake system will sit inside the Bottom of the OEM airbox. ( Picture 4 )

**: Disregard installation on Hyper filter.**

with supplied clamp.

R intake pipe, secure with OEM clamp.

under the clamp on air filter.

est hole to the Weapon\*R air filter.

acket

kit.

are no

for pe


ce in e

**IN TH**

stockin

horize

s. We n

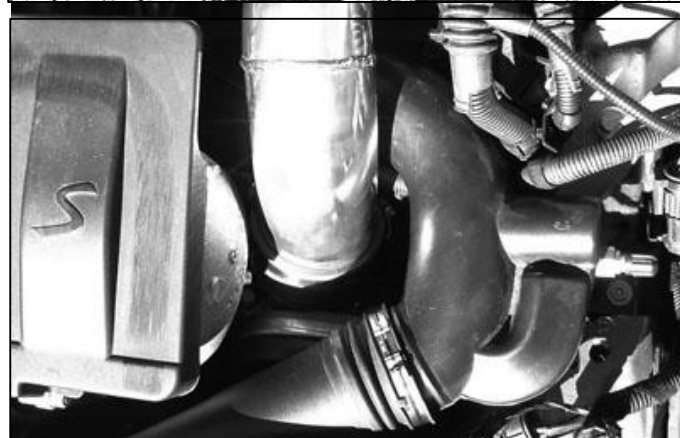

For other questions please email our technical support team.

Visit our website at [www.weapon-r.com](http://www.weapon-r.com).